



QUICK REFERENCE CARD

For TI 99/4A or Colecovision

The Buttons on the Pad

- LIFT — While drawing, is used to stop cursor from drawing on the screen. Also used to leave the menu mode.
- SELECT — All-purpose button used for selecting features and activating commands.
- MENU — Terminates current activity and return immediately to menu mode.
- RELEASE — Non-electrical button used only to lift paper clamps to allow paper to be secured to the pad.

Main Menu

- Clear — Erases the entire screen.
- Swap — Swaps the visible color under cursor with the current color.
- Expert — Entry point to access EXPERT Menu.
- Brush — Allows selection of brush for line thickness.
- Color Palette — Use to select desired drawing color and cancel design.
- Texture — Crosshatch current color for fills & lines.
- Eraser — Used to selectively erase portions of the screen.
- Draw — Freehand drawing with current color, brush style, and design.
- Fill — Paints within drawn borders with currently defined design.
- Show — Display your final picture with no distracting cursors or menus.

Expert Menu

- Lines — Used to preview lines prior to drawing; helps in designing triangles or other line drawings.
- Rays — Same as LINES except origin is not updated.
- H or V — Will only allow draw straight horizontal or vertical lines.
- Box — Computer helps you draw perfect rectangles.

FOR TI 99/4A ONLY:

- Save — Save the picture to tape.
- Load — Load a picture from tape.
- RW-FF — Rewind/Fast Forward tape.



OWNER'S MANUAL

